



INSTRUCTION MANUAL FOR ELECTRONIC LCD SECURITY KEY SAFE

Models: KC25S, KC60S, KC100S

Opening the Door

- Press "START" button, then input the six digit code (**factory preset code is "159159"**). A varying tone will sound, "OPEN" will appear on the LCD and green light will illuminate.
- Wait for green light to illuminate and turn the round plastic knob clockwise to unlock and pull open the door within 5 seconds.

Set Personal Secret Code

- Open the door as in step 1 followed by pressing the "START" button. When six dashes show on the LCD "- - - - -" set any six-number code.
- **Immediately** after entering new 6 digit code press the red button on inside back edge of the door, (adjacent to hinge).
- "IN" and your 6 digit personal code will show on LCD and a varying tone will sound which means your new personal code has been input successfully. (The old personal code will be replaced by the new).

Set Manager Secret Code:

- Open the door as in step 1 followed by pressing the red button on inside back edge of the door.
- When LCD "- - - - -" shows on LCD display, press "START" button and set your six digit code. (Managers secret code should be different to personal code).
- "IN" and your 6 digit manager code will show on LCD and a varying tone will sound which means your new manager code has been input successfully. (The old manager code will be replaced by the new).

System Lock

If wrong code is entered, "ERROR" will show on LCD and a tone will sound. If wrong code is entered five times, the whole system will stop working for 2½ minutes during which warning tone sounding.

Low Battery

When pressing the "START" button if "LO-BAT" shows on LCD display, batteries are in low voltage state and should be replaced.

Emergency Override System

If you forget your codes or the electronic system is not working, use the override keys to open the door of the safe. (Slide open the battery cover; remove the batteries and insert override key into the emergency lock. Turn key anticlockwise approximately 45° and rotate round plastic knob clockwise.

Caution

- Never put override key inside of cabinet
- Keep a record of number on key and end face of lock

BURG-WACHTER UK LTD

Eurocam technology Park, Chase Way, Bradford. BD5 8HW
www.burg.biz/uk