

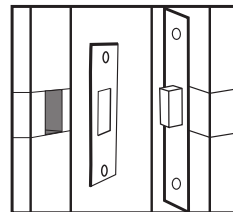
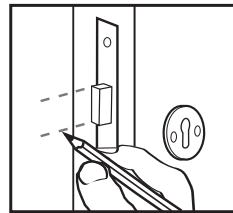
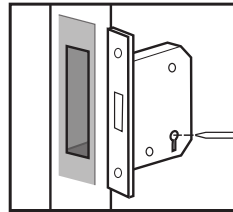


Fixing Instructions

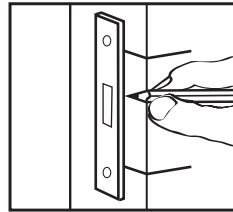

3 Lever Mortice Deadlock

1. Position lock centrally on door and mark off body on the edge and both faces of door. Cut slot to suit lock ensuring a snug fit.
2. Insert lock and mark position of front faceplate recess.
3. Using lock as template, mark off position follower. Drill both sides of door. Insert lock, position face plate and fasten with screws provided and test operation of lock.
4. With door open, turn key to locked position. Close door onto frame and mark positions of 'Dead Bolt'. Fit keyhole escutcheon (not supplied) for a tidy finish.
5. Mark out and cut slot in frame to accommodate flat strike plate. Fix the plate, recess flush with frame if required. Part secure plate initially to test lock operation. Complete fixing.

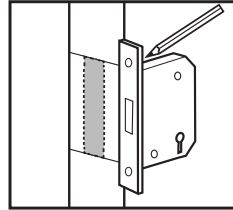

Sterling Locks Limited
 Leeds Bradford Airport Industrial Estate
 Harrogate Road, Yeadon, Leeds LS19 7WP
www.sterlinglocks.com

