

# Sterling

## *3 dial Combination Padlocks (Brass & Aluminium Bodies)*

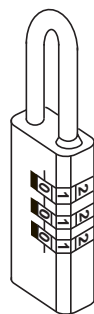


Fig 1

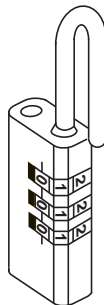


Fig 2



Fig 3

Factory preset at 0 - 0 - 0

1. Set dials to 0-0-0 to open lock, by accurately aligning numbers with the indicator on face of lock. (Fig 1).
2. Turn the shackle 180° so that the notch on the shackle is aligned with the opening on the body. Press down the shackle. (Fig 2).
3. Turn the shackle 90° or more and rotate dials to set your personal combination. (Fig 3). Memorize and record secret number.
4. Turn the shackle back so it is 180° from the locking position. Pull up the shackle and your lock is now ready to use. Scramble dials to lock.